 


Sprecher and Schuh L7 Switch Body 3 Pole Off On 63A Base Mount

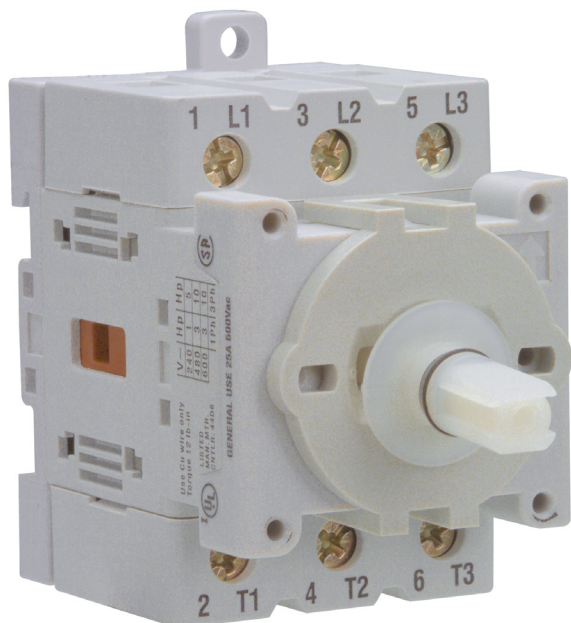

The Sprecher + Schuh L7 line is compact, reliable and the ideal choice for all disconnect applications. All accessories snap-on and off for quick assembly. The L7's modular design allows for multiple combinations and use of universal accessories. Available in base (LA7) and panel (LE7) mount options up to 100A with easy selection, needing only two part numbers to build a complete switch assembly.




LA7631753

Sprecher and Schuh L7 Switch Body 3 Pole Off On 63A Base Mount



DIMENSIONAL DIAGRAM

   LA 7 - base mounted switches - 3 pole (16 ... 100 A)

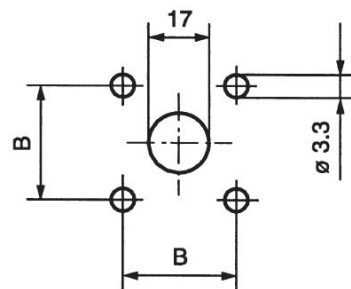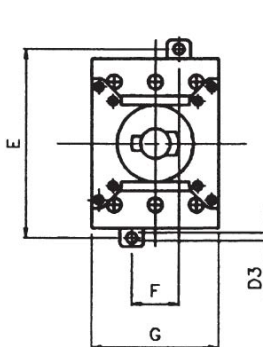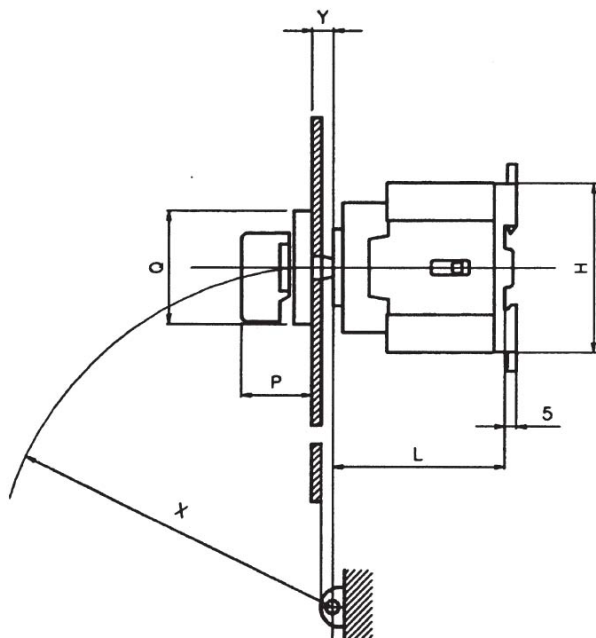

Type	D3	E	F	G	H	L
LA 7-16	4.5	70	11	36	63	55
LA 7-25/32	4.5	70	15	45	64	59
LA 7-40/63	4.5	80	20	54	72	73
LA 7-80/100	5.6	95	25	72	90	89

Type	Y min.	X ≥	Y max.	L ≥
LA 7-25/32	5	142	9.5	90
LA 7-40/63	2.5	150	9.5	90
LA 7-80/100	2.5	150	9.5	90

RELATED PRODUCTS

ACCESSORY



Item No: L740C3

Required: No

 
Description: Sprecher and Schuh L7 Terminal Cover 3 Pole suits LE and LA740 and 63 (QTY 1)



Item No: L740C4

Required: No


Description: Sprecher and Schuh L7 Terminal Cover 4 Pole suits LE and LA740 and 63 (QTY 1)

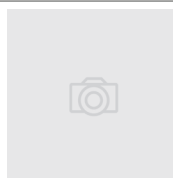

Item No: L7G3661

Required: No

 Description: Sprecher and Schuh L7 Mechanical Coupling 6 Pole for L740 and 63

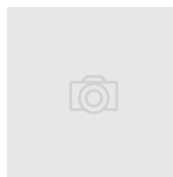

Item No: L7G3664

Required: No

Description: Sprecher and Schuh L7 Enclosure Plastic 125W x 180H x 105D suits LA740-63 (6P) and LA780-100 (3/4P)

LA7631753

 
Sprecher and Schuh L7 Switch Body 3 Pole Off On 63A Base Mount



sprecher+schuh

RELATED PRODUCTS

ACCESSORY

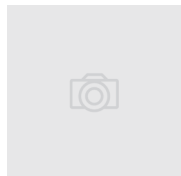

Item No: L7G3666

Required: No

Description: Sprecher and Schuh L7 Enclosure Plastic 175W x 230H x 120D suits LA740-63 (6P) and LA780-100 (3/4P)

Item No: L7G3687

 
Required: No

Description: Sprecher and Schuh L7 Shaft Metal 44mm for LA7 and LA2

Item No: L7G3707

Required: No

Description: Sprecher and Schuh L7 Shaft Metal 54mm for LA7 and LA2

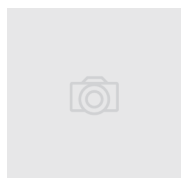

Item No: LA2G2830

Required: No

Description: Sprecher and Schuh L2 Cam Switch Shaft Extension Standard 44mm

Item No: LA2G2853

Required: No

Description: Sprecher and Schuh L2 Cam Switch Shaft Extension including Coupling 24mm

Item No: LA2G3194

Required: No

Description: Sprecher and Schuh L2 Cam Switch Shaft Extension Standard 52mm

Item No: LA2G3195

Required: No

Description: Sprecher and Schuh L2 Cam Switch Shaft Extension Standard 57mm

Item No: LA2G3393

 
Required: No

Description: Sprecher and Schuh L2 Cam Switch Metal Shaft Short Yellow 235mm

Item No: LA2G3394

Required: No

Description: Sprecher and Schuh L2 Cam Switch Metal Shaft Long Yellow 350mm

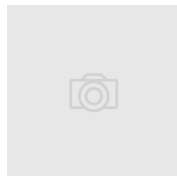

Item No: LA2G3399

Required: No

Description: Sprecher and Schuh L2 Cam Switch Insert To Modify Metal Shaft to Switch Any Position White

Item No: LA763NP

Required: No

 
Description: Sprecher and Schuh L7 Fourth Pole for LA763



Item No: LA763PE

Required: No


Description: Sprecher and Schuh L7 Earth Terminal for LA740 and LA763

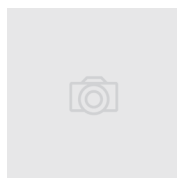

Item No: LA763TN

Required: No

 
Description: Sprecher and Schuh L7 Neutral Terminal for LA740 and LA763

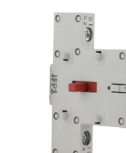

Item No: LA7P11

Required: No

 
Description: Sprecher and Schuh L7 Auxiliary Contact 1 N.O + 1 N.C for LA716 to LA7100

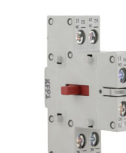

Item No: LA7P22

Required: No

 
Description: Sprecher and Schuh L7 Auxiliary Contact 2 N.O + 2 N.C for LA716 to LA7100

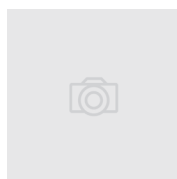

Item No: LA7PD10

Required: No

 Description: Sprecher and Schuh L7 Auxiliary Contact 1 N.O E.B for LA725 to LA7100

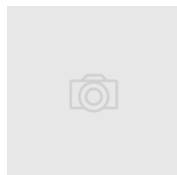

Item No: LA7PL11

Required: No

Description: Sprecher and Schuh L7 Auxiliary Contact 1 N.O + 1 N.C E.M L.B for LA716 to LA7100



Item No: LFS2A4175

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 48 x 48mm Engraved O I

LA7631753

Sprecher and Schuh L7 Switch Body 3 Pole Off On 63A Base Mount



sprecher+schuh

RELATED PRODUCTS

ACCESSORY



Item No: LFS2A4175I

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 48 x 48mm Engraved OFF ON



Item No: LFS2A4375

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 48 x 48mm Engraved 1 0 2



Item No: LFS2A6175

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 67 x 67mm Engraved O I



Item No: LFS2A6175I

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 67 x 67mm Engraved OFF ON



Item No: LFS2A6375

Required: No

Description: Sprecher and Schuh L7 Handle Std Type A BK/Silver Screw Fixing Mount 67 x 67mm Engraved 1 0 2



Item No: LFS2E4175

Required: No

Description: Sprecher and Schuh L7 Handle Std Padlock Type E BK/Silver Screw Fixing Mount 48 x 48mm Engraved O I



Item No: LFS2E6175

Required: No

 
Description: Sprecher and Schuh L7 Handle Std Padlock Type E BK/Silver Screw Fixing Mount 67 x 67mm Engraved O I



Item No: LFS2G6175

Required: No

Description: Sprecher and Schuh L7 Handle Disc Padlock Type G BK/GY Screw Fixing Mount 67 x 67mm Engraved OFF ON

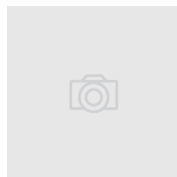

Item No: LFS2G8175

Required: No

 
Description: Sprecher and Schuh L7 Handle Disc Padlock Type G BK/GY Screw Fixing Mount 90 x 90mm Engraved OFF ON



Item No: LFS2I8175I

Required: No


Description: Sprecher and Schuh L7 Handle Std Type I RD/YL Screw Fixing Mount 88 x 88mm Engraved OFF ON

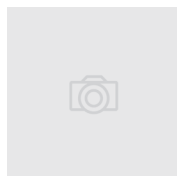

Item No: LFS2L4175

Required: No

 Description: Sprecher and Schuh L7 Handle Std Padlock Type L RD/YL Screw Fixing Mount 48 x 48mm Engraved O I

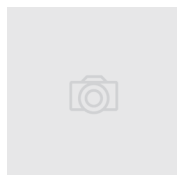

Item No: LFS2L6175

Required: No

Description: Sprecher and Schuh L7 Handle Std Padlock Type L RD/YL Screw Fixing Mount 64 x 64mm Engraved O I



Item No: LFS2N6175

Required: No

Description: Sprecher and Schuh L7 Handle Disc Padlock Type G RD/YL Screw Fixing Mount 67 x 67mm Engraved OFF ON